

Digital Voice Recorder



User Manual

XC-0387


Box Contents:

1 x Digital Voice Recorder

1 x Earphones

1 x Mini B USB Cable

Product Diagram:

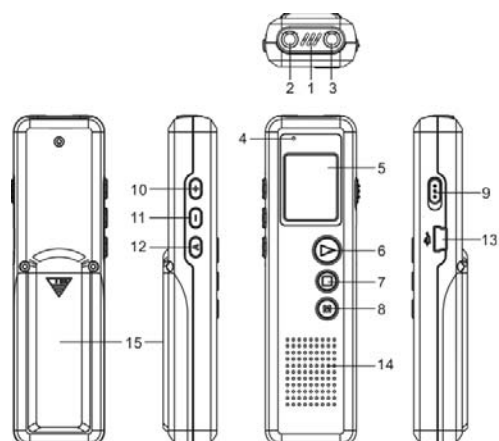

1. In-built Microphone

2. Headphone Jack

3. Microphone Jack

4. Recording LED

5. LCD Display

6. Play/Pause Button

7. Stop/Delete Button

8. Menu Button

9. Record/Stop

10. Vol+/Previous/Rewind

11. Vol-/Next/Fast F


12. Volume Button

13. USB Mini B

14. Speaker


15. Battery Compartment

LCD Diagram:

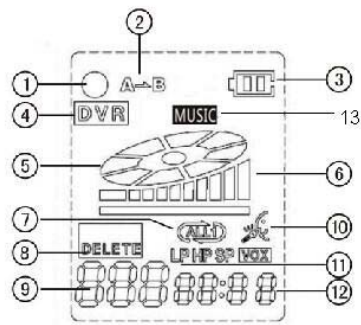

- | | |
|----------------------------|--|
| 1. Recording LED Indicator | 8. Delete Icon |
| 2. Repeat Symbol | 9. File number |
| 3. Battery Capacity | 10. Recording Status Indicator |
| 4. DVR mode | 11. Recording Type & VOR |
| 5. Playback Status | 12. Recording Length |
| 6. Volume Indicator | (Displays "Minutes:Secs" if file less than 1 hour, "Hours:Minutes" if file more than one hour) |
| 7. Repeat Mode | 13. Music Mode |

Functions:

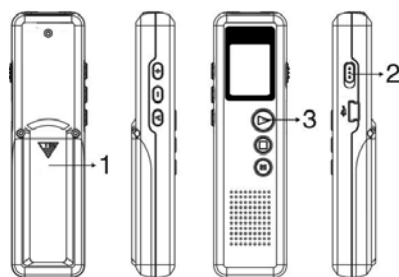

1. On/Off Power Switch:

- Place the 2 x AAA batteries correctly in the battery compartment.
- Press the “▶||” Play/Pause button to turn “on”/“off” the voice recorder.
- Power Off: Press & hold the “▶||” Play/Pause button for 5 seconds until it displays “Off”.
- Power On: Press & hold the “▶||” Play/Pause button for 5 seconds to power the unit on.
- The device will power off automatically if the device has not been used within 3 minutes.
- **Please Note:** The unit will not power off under “VOR ON” state without voice operation. Instead it will pause recording until voice is detected again.

2. Recording:

- In any state, switch the "REC" from "STOP" to "REC" to start recording.
- Slide the "REC" to "STOP". It will save the recording file automatically.
- To pause recording, press the "▶||" Play/Pause button and the recording will pause. Short press "▶||" again to resume recording from pause state.

3. Playback:

Play Recorded File: Press "M" Menu button to enter into "DVR" mode. Press "▶||" Play/Pause to play the current recorded file.

Play Music File: Press "M" Menu button to enter into "Music" mode. Press "▶||" Play/Pause button to play the current music file.

Please Note: Each directory can store up to 200 recording files. If it displays "Disc Full", the directory has stored 200 recording files. Please delete some files to create space.

Modes:**Playback/Pause/Stop:**

- 1. In standby of Music or DVR mode, press "▶||" play/pause to play current file.
- 2. Press "▶||" Play/Pause button to control pause and play.
- 3. In playback state, press "■" to stop playing.
- Music Mode: The device will only play music from the root directory.

Previous/ Next, Fast Forward /Rewind:

- In play or stop state, press "+" to skip to the next file, press "-" skip to go to the previous file.
- In playback state, press and hold "+" to fast-forward, press and hold "-" to fast rewind.

Volume Adjustment:

- In file playback or stopped state, press “V” volume button first.
- Then press “+” to increase the volume, or “-” to decrease the volume. The volume bar will increase and decrease accordingly.
- Press “V” Volume button again to exit.

A-B Repeat Mode:

- In playback state, press “M” Menu button to set up beginning point A.
- The LCD will display A-B, B will flash, press “M” again to set up ending point B.
- LCD will display AB to repeat the contents between A-B.
- To cancel the mode selection, press “M” Menu and cancel A-B repeat.
- Press “■” to cancel A-B repeat and playback will stop.
- Press “▶||” to cancel A-B repeat and playback pause.

Delete File:

- In the Music/DVR stopped state, find the file you want to delete by pressing "+" and "-".
- Press and hold "■" stop button to enter the delete mode. LCD will display "DELETE" and "ONE".
- Press "■" stop again to switch "ONE" and "ALL".
- Press "M" Menu to confirm; if press "+" and "-".
- Note: If no button is pressed within 8 seconds, it will return to stop stay and not delete the file.

Switch The Recording Type Folder:

In the DVR stopped state, press "■" Stop button to switch the recording type folder: REC HP(HQ) folder, SP folder and LP folder.

FM Mode (Only Played Through Earphones):

Press "M" Menu button to until "FM" is displayed.

- Press "+" or "-" key to change the frequency.
- Press and hold "+" to enter auto-search.
- Press "▶||" Play/Pause button to stop searching. The device can save up to 30 channels.
- Press "▶||" Play/Pause to change the channel in ascending sequence.
- Press and hold "-" to search next channel.
- Short press "M" Menu to save the channel.

Please Note: The channel list is automatically sorted according to frequency form low to high frequency.

Please Note: The FM radio mode can only be heard through the earphones, the earphones act as an antenna and will not allow you to play through the voice recorder's speaker. Any earphones are suitable to use.

Delete FM Channel:

- Under FM stop mode, press "▶||" Play/Pause to find the channel you want to delete.
- Press and hold "■" Stop button to enter the delete mode, the LCD will display "DELETE" and "ONE".
- Press the "■" Stop button again to switch "ONE" and "ALL".
- Press "M" Menu to confirm delete.
- Please Note: If no channel is deleted within 8 seconds then it will return to the stop state.

Voice-Activated Recording (VOR) Mode:

- Press "M" Menu button to display the following:



- Press "+" or "-" key to switch ON and OFF.

Please Note: If you turn on the VOR, the device will pause recording if there is no voice detected. If the "VOX" icon flashes, the recorder will record continually once voice is detected.

Record Modes:

- Press "M" Menu button and scroll through to find "REC type" menu:



- Press "+" or "-" key to switch between HP(HQ) and "SP" and "LP" recording modes.
- Press the "■" Stop button to confirm the selection.

Please Note: The recording will auto-save in the corresponding folder.

Check Remaining Recording Time:

- Press "M" Menu button and scroll through to find "Check remain REC time":



Please Note: If the remaining time is less than 9999mins, the digit means "mins". If the remaining time is over 9999mins, the digit means "hours".

Time & Date:

Plug the USB cable in to the voice recorder and connect to your laptop or PC. A message will automatically pop up with a removable storage device, if it doesn't then please open up my computer and click on XC-0387. Located on the device is a program called "Tool For Setup Device Time". Please double click on this program, after you have clicked on it you should see a message saying success. This will automatically synchronize to your computer or laptop's current time. Please adjust your computers time and date if it isn't correct.

Please Note: Please set the time & date again if

**the battery has run out of has been changed.
Removing the battery will cause the device to
reset the time and date.**

PC Connection:

Please connect the voice recorder to your pc using the included Mini B cable. The name XC-0387 will automatically pop up as a removable storage device. If it does not open automatically then go to my computer, it should show up as a removable storage device.

Specifications:

Memory: 2GB Internal

Recording Modes: HQ, SP & LP

Recording Format: MP3 (HQ & LP), WAV (SP)

Recording Time: 34hrs HQ

134hrs SP

540hrs LP

Battery: 2 x AAA (Not Included)

Battery Life: Up to 27hrs HQ, 41hrs SP, 41hrs LP

Compatibility: Windows 10, 8.1, 8, 7, Vista, XP, 2000,

Mac OS X® 10.0+

Dimensions: 102(H) x 30(W) x 17(D)mm

Distributed By:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500

www.techbrands.com

Made in China