

Y-107

User's manual

Feature:


- Compatible with USB 1.1
- Supports wake-on-line & power management function
- No IRQ, DMA, I/O Address resources required
- Hot swappable
- Easy plug & play
- Serial high speed transfer up to 230400 bps
- Parallel port support ECP/EPP/SPP mode
- Parallel transfer speed up to 1.5 MB/sec
- Supports Windows® 98, Me, 2000, XP, Server 2003, Vista 32/64 bit.

System Requirements:


- Windows® 98/Me/2000/XP/Server 2003
- AMD or Intel Pentium 133 MHz or better based computer
- USB 1.1 or higher port

Installation instruction

- Connect the adapter as shown below.

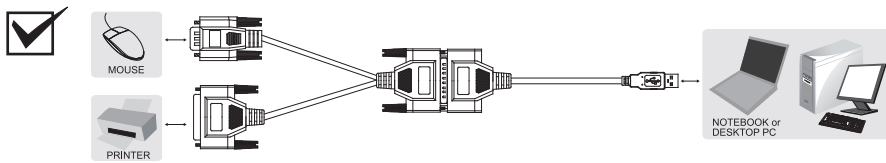

- The USB TO DB25 adapter can't be use individually.

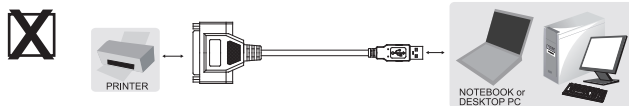

Driver installation

Windows 98SE/ME operating systems

- Turn the computer ON.
- Put the CD driver into the CD-ROM. According to system requirement, choose the relative driver folder.
- Run Setup.exe from Y-107 driver folder
- Setup window appears, click Install button to install the drives. To cancel the installation press Exit.
- The installer will display a message Installation is in Progress...Please Wait!
- Then the installer should display "Installation completed. Press "Exit" to terminate the application. No need to restart the machine. Unplug and Replug the device if it is currently connected."
- Click Exit to close the installer.
- Plug-in the Y-107 Device to one of the USB port.
- Windows should detect the new USB device, and automatically install the drivers.
- When Windows desktop is displayed, the Driver installation is complete.

Note:

- If multiple user accounts are used on your system, make sure you use user account with administrator privileges for running the Setup.exe. As per windows OS security policy only users with administrator privileges can run Setup.exe to install different drivers and applications.

Windows 2000/XP operating systems

- Turn on the Computer and then put the CD driver into the CD-ROM. According to system requirement, choose the relative driver.
- Run Setup.exe from Y-107 driver folder.
- The installer will display a message Installation is Progress...Please Wait
- Then the installer should display "Installation completed. Press "Exit" to terminate the application. No need to restart the machine. Unplug and Replug the device if it is currently connected."
- Click Exit to close the installer
- Plug –in the USB cable of Y-107 device to one of the USB port on your Computer
- Windows should detect the new USB device, and automatically install the drivers for the new hardware connected
- When Windows desktop is displayed, the Driver installation is complete.

Note:

- If multiple user accounts are used on your system, make sure you use a user account with administrator privileges for running the Setup.exe. As per Windows OS security policy only users with administrator privileges can install drivers.

- 2). In case of Windows XP, add new hardware window will appear when Y-107 device is connected to USB port after running Setup.ext, click next and then click continue anyway for Windows logo certification popup. Click Finish to complete installation.
- 3). While running setup/ updating for in Windows 2000 and Windows XP, it is to be noted that user should click Next directly, when the system O.S. reminds user that the provided doesn't have a digital signature.
- 4). Please follow the instructions of operating system in rebooting when ever prompted.

Window Vista 32-bit:

- a. Turn on the Computer and then put the CD driver into the CD-ROM. According to system requirement, choose the relative driver.
- b. Use Setup.exe utility to install the driver. Double click on Setup.exe to start the installation process. Make sure that the User installing the driver must be a member of the Administrators group on the system. You will get a "User Account Control" window saying "An unidentified program wants access to your computer". Click on "Allow" to continue installing the Driver.
- c. You will get an installation window, please press "Install" button to install the drivers for USB compound Device.
- d. During the installation process, a "Windows Security" warning message pops up informing that "Windows can not verify the publisher of the driver software". Ignore the warning message by clicking on the option "Install this driver software anyway"
- e. You will get the above message two times and you have to select "Install this driver software anyway"
- f. The utility displays a message stating "Installation completed". Use "Exit" button to complete the driver installation. If prompted by the OS, click on "Reboot Now" button.

Windows Vista 64-bit:

The 64-bit version of Windows Vista is the first version of Windows that will only allow signed drivers and this restriction is built-in. Y-107 drivers are unsigned and we request you to follow some prerequisites before installing the driver.

Preparing Vista 64-bit for Driver installation:

1. Using the F8 option: Press F8 key on your keyboard while booting your PC. You will get into "Advanced Boot Options". Select "Disable Driver Signature Enforcement"
2. An F8 Advanced Boot Option introduced with Windows Vista – "Disable Driver Signature Enforcement" is available to disable the kernel-signing enforcement only for the current boot session. This setting doesn't persist across boot sessions.

Note: Make sure to use F8 option every time you boot/reboot your PC before start working with Y-107.

3. Make sure that the User installing the driver must be a member of the Administrators group on the system.

Installing the Driver in Windows Vista 64-bit:

Before running the installer (Setup.exe) or uninstaller (MosUnst.exe) utility of Y-107, right click on them and select "Run as administrator".

Note: Running the setup utilities as administrator is required, as User Account Control (UAC) is enabled by default in Windows Vista, which does not allow the user to make changes to OS components. If UAC is disabled, you can install the driver without running the setup utilities as an administrator.

The UAC can be turned ON/OFF at Control Panel -> User Accounts -> Click on Turn User Account Control ON/OFF -> Here you can disable/enable the UAC.

The remaining install/ uninstall procedure of Vista 64-bit is same as Windows Vista 32-bit, as explained above.