

digitech

2 Channel Soundbar Speaker with Bluetooth® 5.0 Technology



User Manual XC-5233

Box Contents:



1 x 2 Channel Soundbar Speaker



1 x Infrared Remote Control



1 x Mains Power Adaptor

Product Diagram:



#	Feature:	Description:
1.	Mounting Bracket/Feet	Used to mount the soundbar on a wall or place on a flat surface
2.	DC Power Socket	Connect to the 15VDC mains power adaptor
3.	3.5mm Audio Input 2	Connect to an audio device such as a smartphone using the 3.5mm audio cable
4.	3.5mm Audio Input 1	Connect to an audio device such as a smartphone using the 3.5mm audio cable
5.	Optical TOSLINK Input	Connect to a TV or monitor
6.	HDMI ARC Input	Connect to a TV or monitor using a HDMI ARC Input
7.	Infrared Port	Used to operate the remote control
8.	LED Status Indicator	Displays the current mode and Bluetooth® status
9.	Power/Play/Pause Button	Press and hold to power the soundbar on and off Press once to play or pause the current audio
10.	Previous Track/Volume Down	Press and hold to skip to the previous track Press to adjust the volume down
11.	Next Track/Volume Up	Press and hold to skip to the next track Press to adjust the volume up
12.	Mode Button	Switch between Bluetooth®, HDMI ARC, TOSLINK optical and aux in modes Press and hold to disconnect the paired device

Operation:

Bluetooth® Pairing:

1. Connect the plug of the mains power adaptor to the rear power socket of the sound bar. Connect the opposite side of the mains power adaptor to a standard 240VAC wall socket
2. Press and hold the power button for up to 2 seconds to turn the unit on. The sound bar will automatically enter Bluetooth® mode and the LED will begin to flash.
3. Open the settings of your TV, smart phone or tablet and ensure Bluetooth® is turned on.
4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name XC-5233 should appear. If the name doesn't appear then please ensure the speaker is correctly powered on and the correct mode is selected.


Bluetooth® Name: **XC-5233**

5. Select the XC-5233 on the Bluetooth® device list and your TV, smartphone or tablet should show that it is now connected.
6. You can now start playing audio from your TV, smartphone or tablet. The volume can be adjusted from both the speaker and your device. The LED will stay blue once connected.

Note: If the speaker can't be connected; then please restart the speaker or the device and try again. Press and hold the mode button to disconnect the current device connected.

TOSLINK Optical Input:

1. Insert a TOSLINK optical cable (not included) to the TOSLINK optical audio input socket located at the rear of the speaker.
2. Insert the opposite end of the TOSLINK optical cable to an audio device such as your TV or monitor.
3. The TOSLINK optical mode will automatically start playing once the device has been inserted.
4. Depending on your brand of TV or monitor being used; you may need to adjust the audio settings of your TV for the device to be picked up.
5. Make sure that your output sound settings are set on TOSLINK/Optical so that it's playing correctly.
6. Open the advanced settings and find the digital audio output format and change to PCM which should start playing straight away. The settings will differ depending on the brand of TV.

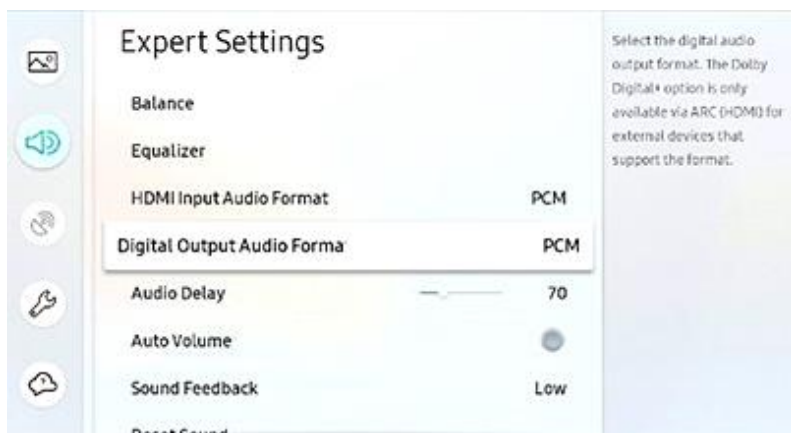

3.5mm Audio Input 1 & 2:

1. Insert a 3.5mm to 3.5mm auxiliary cable (not included) to the 3.5mm audio input 1 or 2 sockets located at the rear of the speaker.
2. Insert the opposite end of the 3.5mm to 3.5mm auxiliary cable to an audio device such as a smartphone, tablet or computer.
3. The Aux mode will automatically start playing once the device has been inserted. You can now play, pause or skip tracks from your audio device.

HDMI ARC Input:

1. Insert a HDMI cable (not included) to the HDMI ARC input socket located at the rear of the speaker.
2. Insert the opposite end of the HDMI cable to your TV or monitor that is equipped with a HDMI ARC port.
3. The HDMI ARC mode will automatically start playing once the device has been inserted.

Note: Your TV or monitor must be equipped with HDMI Audio Return Channel (ARC) in order for this mode to work.

Remote Control:



Feature:	Description
Power On/Off	Press to switch the power on or off
Mode	Press to switch between Bluetooth®, HDMI ARC, TOSLINK Optical and Aux In modes
Previous Track	Press the previous track button once to skip to the previous music track
Play/Pause	Press the play/pause button to pause or resume the current music track
Next Track	Press the previous track button once to skip to the next music track
Unpair	Disconnects the current Bluetooth® device paired
EQ	Adjusts the different equalizer settings of the speaker
Mute	Press to mute the sound of the device
Vol -	Press to turn the volume down
Vol +	Press to turn the volume up

Troubleshooting:

Problem:	Solution:
No Audio	Ensure the volume is correctly turned up on the speaker.
	Ensure the volume is correctly turned on your audio device if connected in Bluetooth® mode.
	Try a different audio source or mode; it may be your device not transmitting audio.
Bluetooth® Will Not Pair	Restart the speaker and audio device.
	Type in the password “0000” if it asks you for one.
	Make sure the mode of the speaker is selected to “BT” and the Bluetooth® is turned on from your device.

Safety:

1. Do not open the case of the speaker to avoid damage and injury.
2. Keep the speaker away from high temperatures as it may cause damage to the speaker and battery.
3. If using a replacement or third party mains power adaptor; make sure the voltage and current match the specifications as 15VDC.

Specifications:

Bluetooth® Version: 5.0+EDR

Transmission Range: Up to 10m

Inputs: 1 x Optical TOSLINK, 2 x 3.5mm Aux, 1 x HDMI ARC

Output Power: 2 x 14WRMS

Driver: 2 x 2", 4Ω

Frequency Response: 120Hz-18KHz

Distortion: ≤10%

Remote Control Battery: 2 x AAA

Power: 15VDC, 2A

Dimensions: 780(L) x 62(H) x 61(D)mm

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.electusdistribution.com.au